

Typ/Type ENDOW X

cre 8
PUZZLE







Budete potřebovat imbusový klíč 5mm a křížový šroubovák.
You will need an Hex Allen Key 5mm and a screwdriver "Phillips".
Vous aurez besoin d'une clé Allen hexagonal 5mm et tournevis "Phillips".
Necesitará un llave Allen 5mm y destornillador "Phillips".







1/1

NÁVOD PRO MONTÁŽ STOLU.
ASSEMBLY INSTRUCTIONS FOR DESK.
INSTRUCTIONS POUR ASSEMBLAGE DE BUREAU.
INSTRUCCIONES DE MONTAJE DE MESA.

DESKA STOLU 800|1000|1200|1400|1600 x 600|800.
DESK 800|1000|1200|1400|1600 x 600|800.
BUREAU 800|1000|1200|1400|1600 x 600|800.
MESA 800|1000|1200|1400|1600 x 600|800.

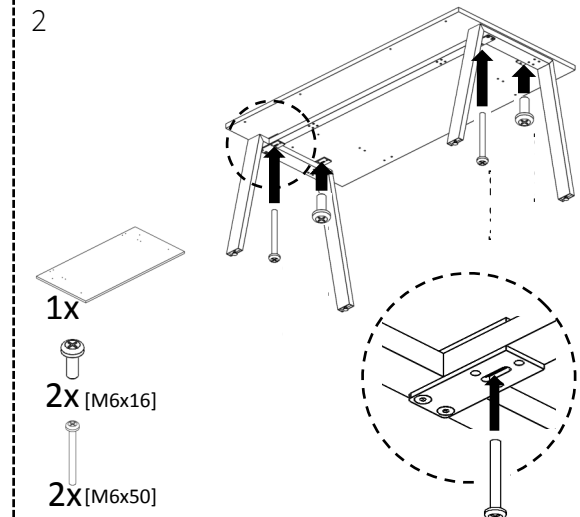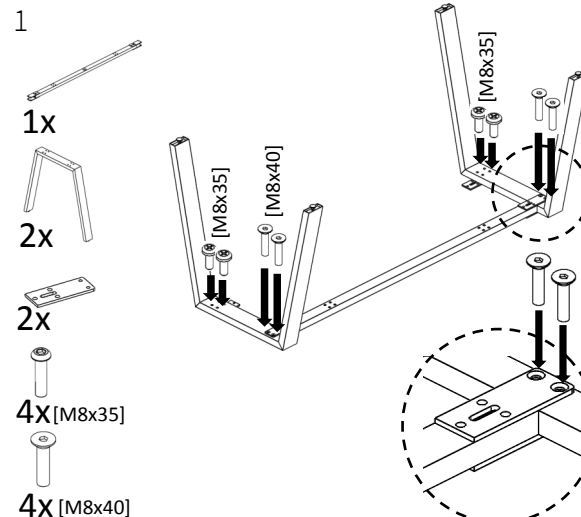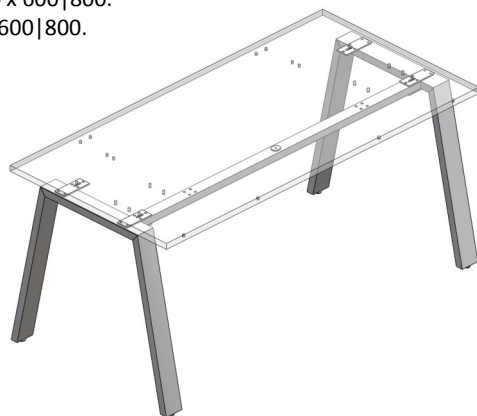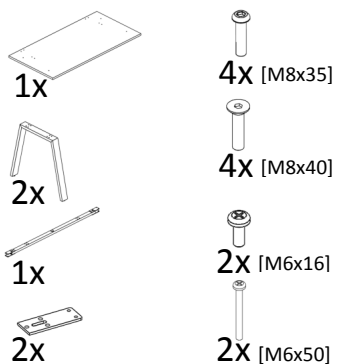

DESKA STOLU 1800|2000 x 600|800.
DESK 1800|2000 x 600|800.
BUREAU 1800|2000 x 600|800.
MESA 1800|2000 x 600|800.

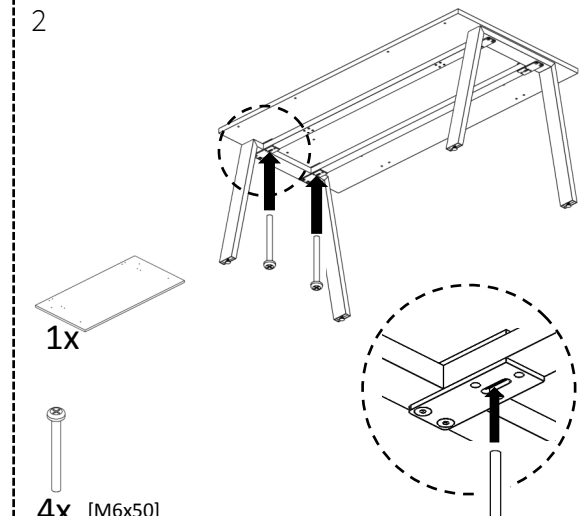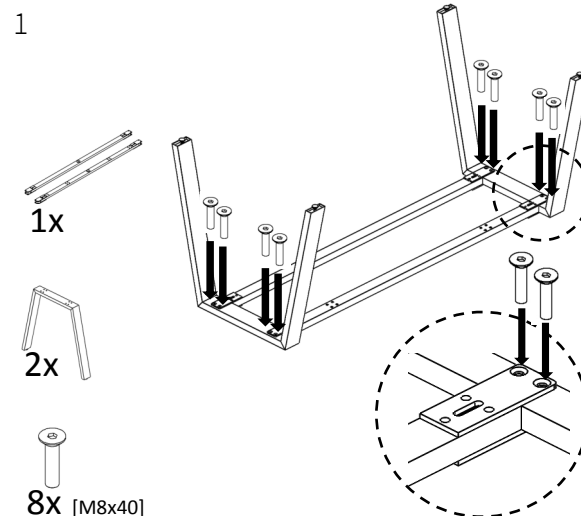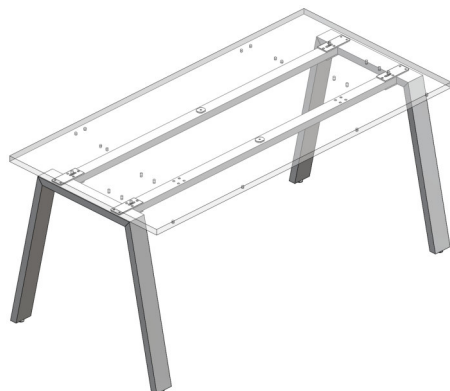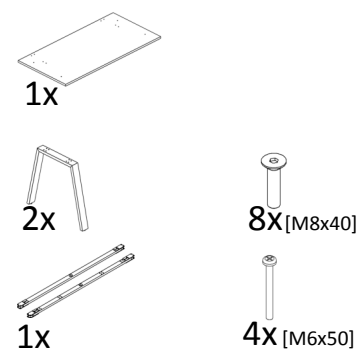

Typ/Type ENDOW Y, Z

cre8
PUZZLE

NÁVOD PRO MONTÁŽ STOLU.
ASSEMBLY INSTRUCTIONS FOR DESK.
INSTRUCTIONS POUR ASSEMBLAGE DE BUREAU.
INSTRUCCIONES DE MONTAJE DE MESA.







Budete potřebovat imbusový klíč 5mm a křížový šroubovák.
You will need an Hex Allen Key 5mm and a screwdriver "Phillips".
Vous aurez besoin d'une clé Allen hexagonal 5mm et tournevis "Phillips".
Necesitará un llave Allen 5mm y destornillador "Phillips".



1/1

DESKA STOLU 800|1000|1200|1400|1600 x 600|800.
DESK 800|1000|1200|1400|1600 x 600|800.
BUREAU 800|1000|1200|1400|1600 x 600|800.
MESA 800|1000|1200|1400|1600 x 600|800.

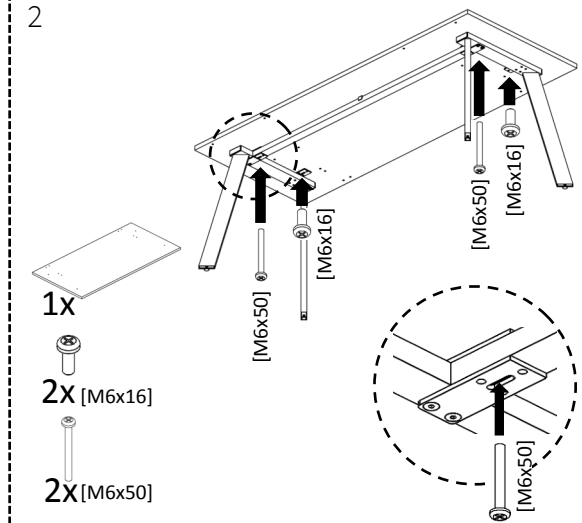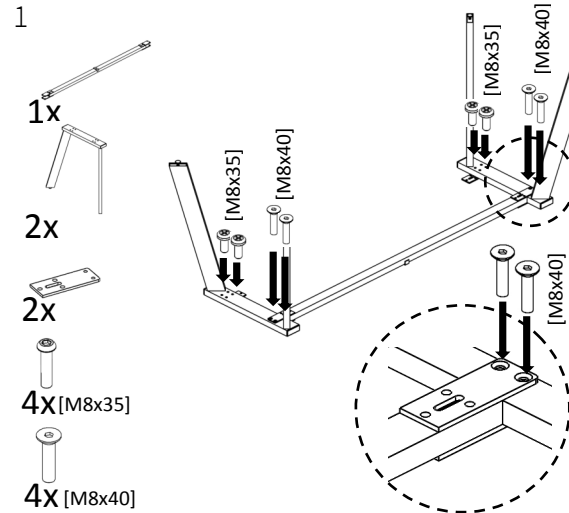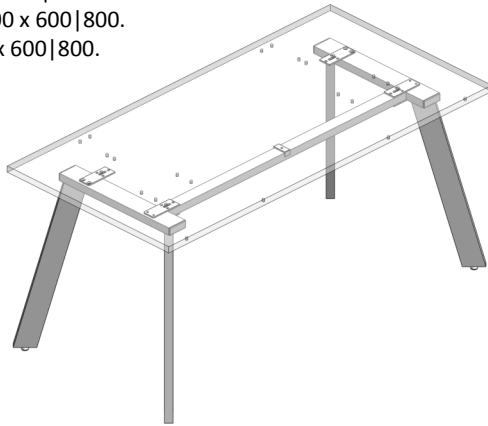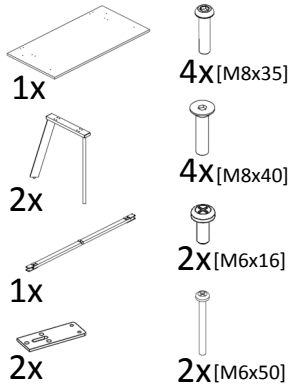

DESKA STOLU 1800|2000 x 600|800.
DESK 1800|2000 x 600|800.
BUREAU 1800|2000 x 600|800.
MESA 1800|2000 x 600|800.

