


– INSTRUCTION MANUAL –

BOA TABLE



POWER FRAME & CONI

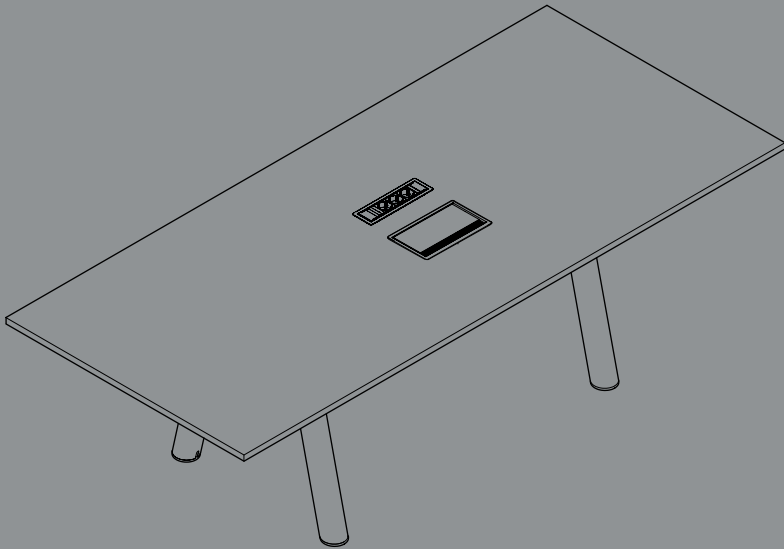


DESIGN BY STEFAN DIEZ

HAY


During assembly, place the parts of the frame and the table top on a carpet to avoid scratches and other damage.

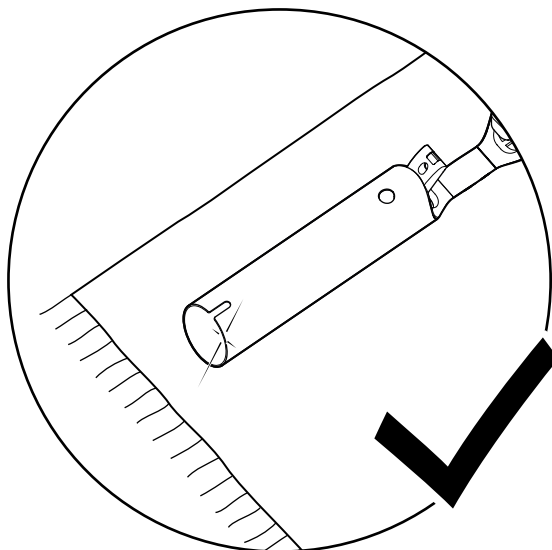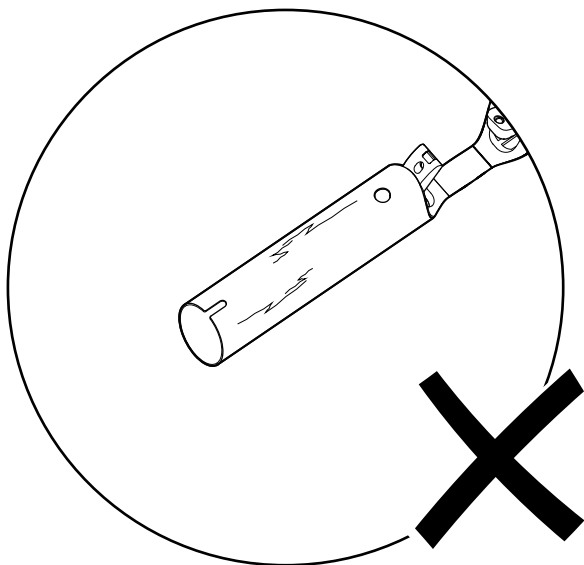


- PARTS -

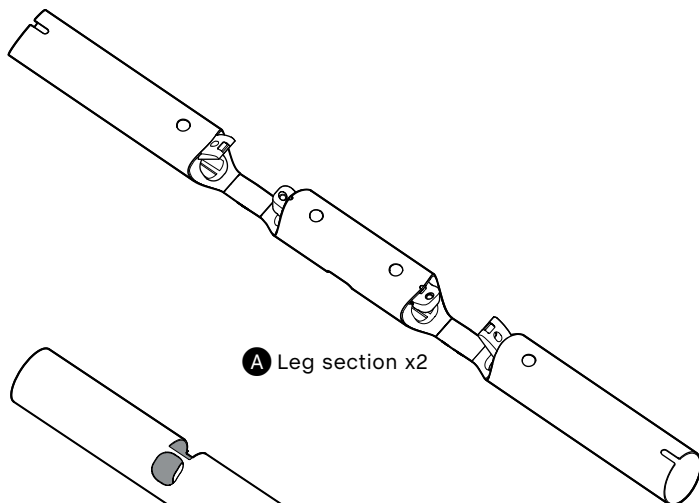

A Leg section x2

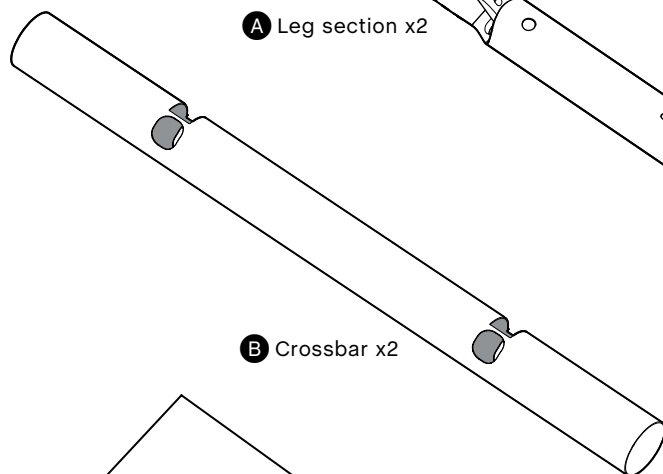


B Crossbar x2

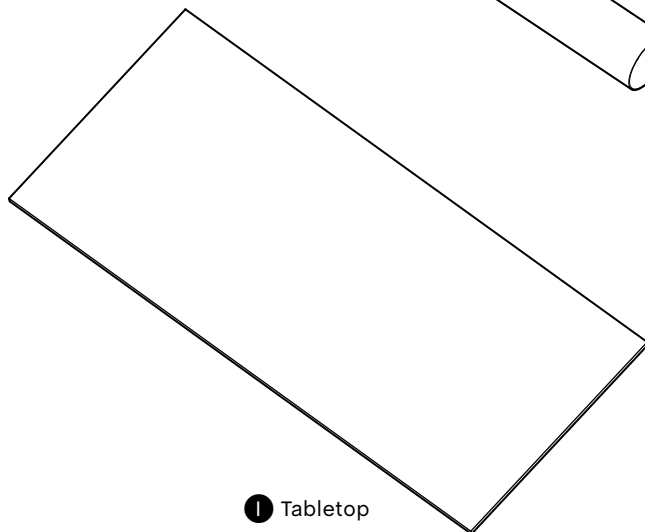


I Tabletop

- PARTS -

MOUNTING BAG 1

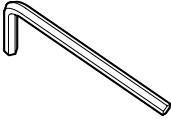

D Allen key




C Screw x4




L Washer x4

MOUNTING BAG 2

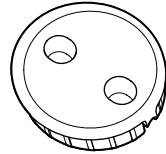

F Feet x4

MOUNTING BAG 3

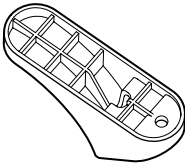


E Connector



H Screw

MOUNTING BAG 6

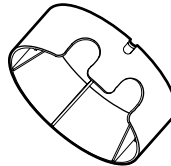


G End cap x4




O Torx bit

MOUNTING BAG 4


Only for connecting tabletops

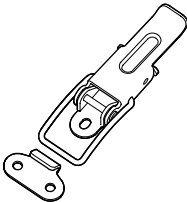


J Latch x2



M Screws x8

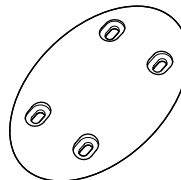


K Connector x2




N Screws x8


CABLE MANAGEMENT

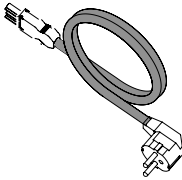

A Supply cable x1

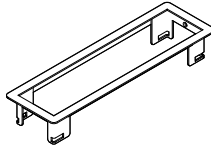


B Power Access
Frame x1

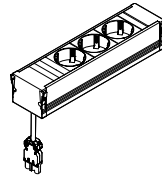


C Power Module
Frame x1

or

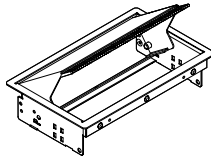

D Power Access
Coni x1

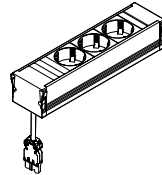


E Power Module
Coni x1

1.

Place the crossbars **B** in the openings of the leg sections **A**.
Make sure the small tabs in the crossbar openings are aligned as illustrated.




Two people are required to carry out the table assembly.

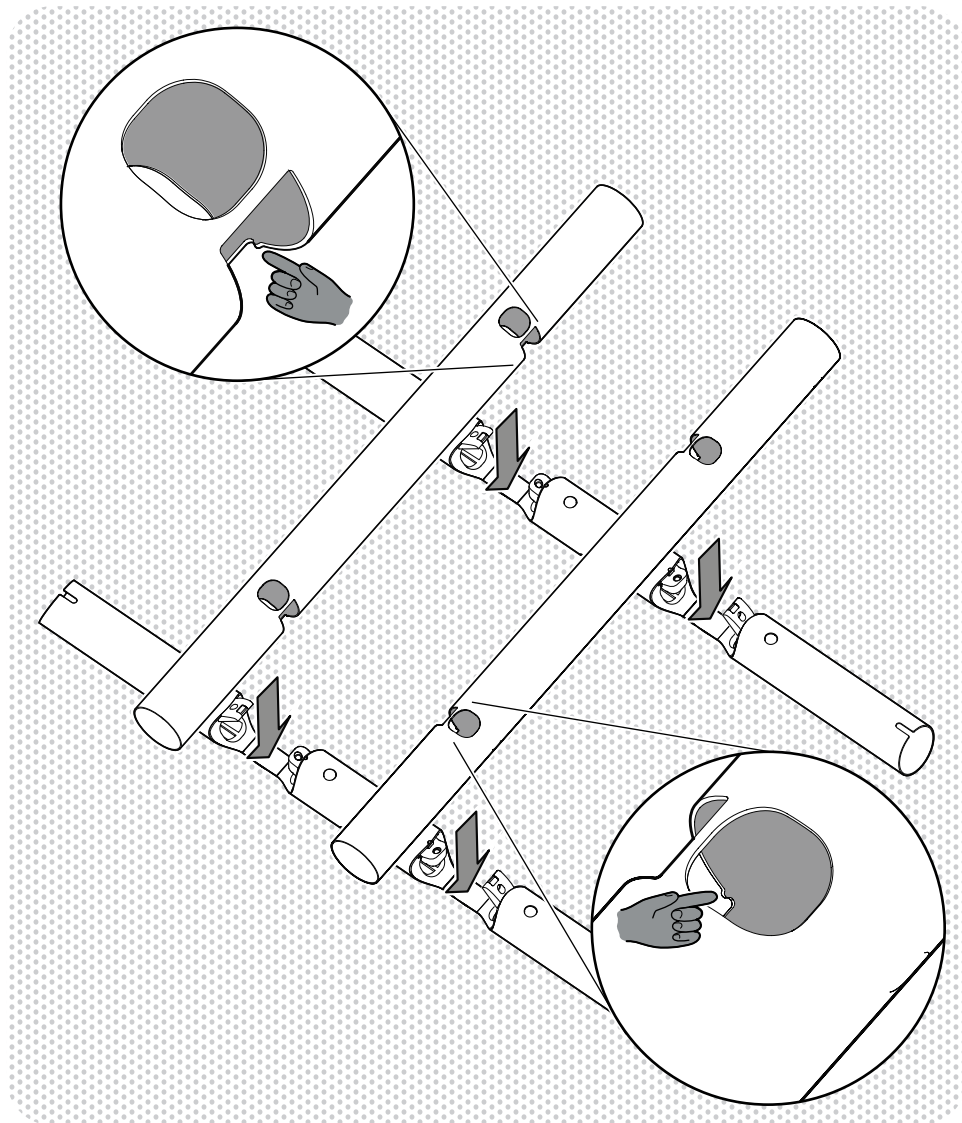

2.

Slide the crossbars towards the middle of the leg sections, making sure they slide over the plastic insert.

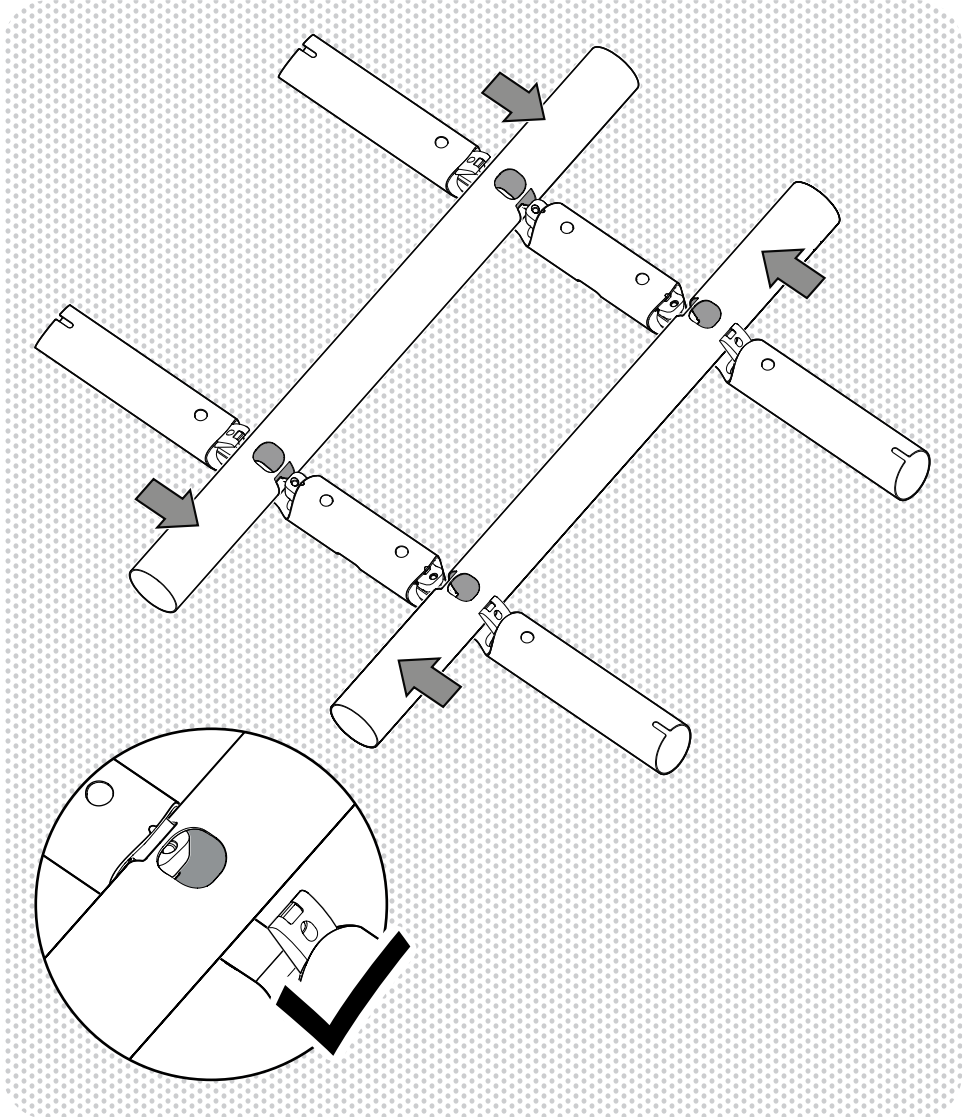


3.

Rotate the crossbars away from the centre, so the small tabs lock into the plastic insert.



Make sure it is correctly locked into place at each ends.

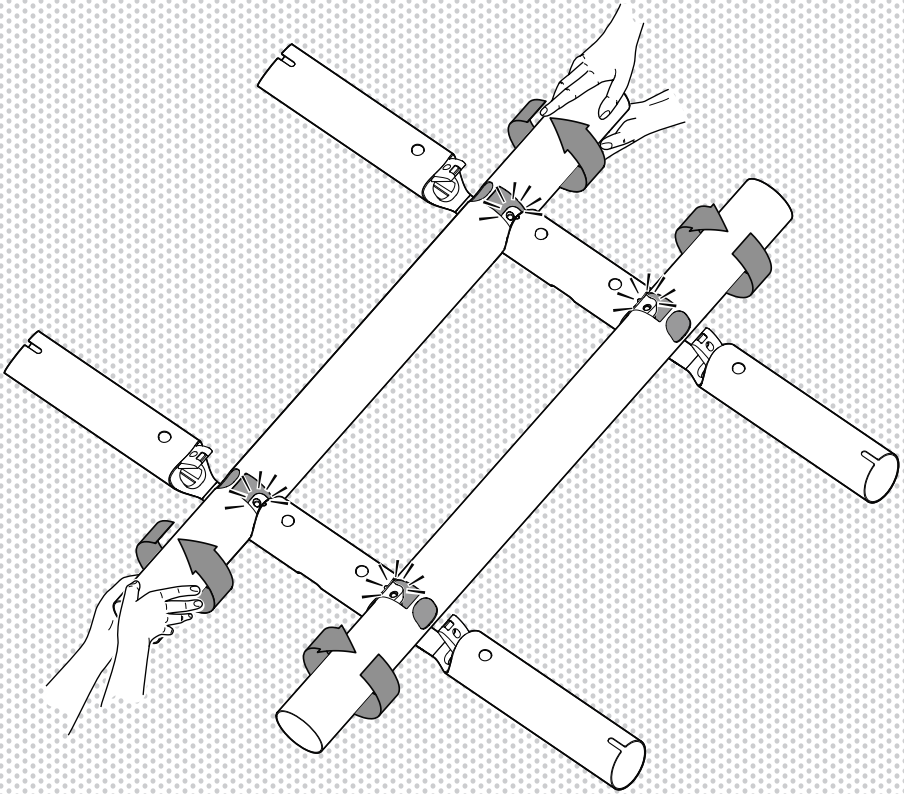


- CABLING 220 CM TABLES -

220 CM	280 CM	350 CM	420 CM
--------	--------	--------	--------


Note : If you have a 280, 350 or 420 cm table, please go to step 6

4.

Insert the supply cable  into the leg, starting from the end of the leg.


Pull the cable out of the leg and insert it again through the crossbar.

Bring the plug head out of the leg through the middle hole.

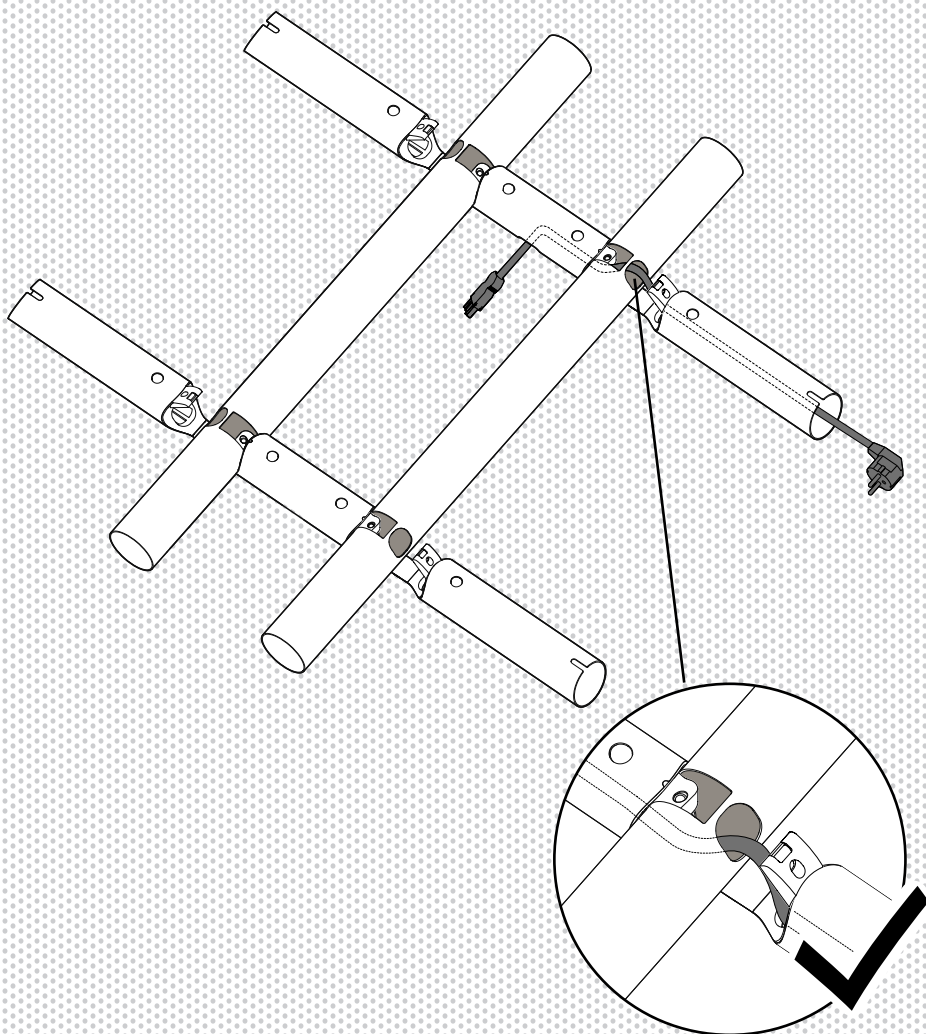

5.


Insert the feet, making sure the supply cable is correctly placed in the cut-out.

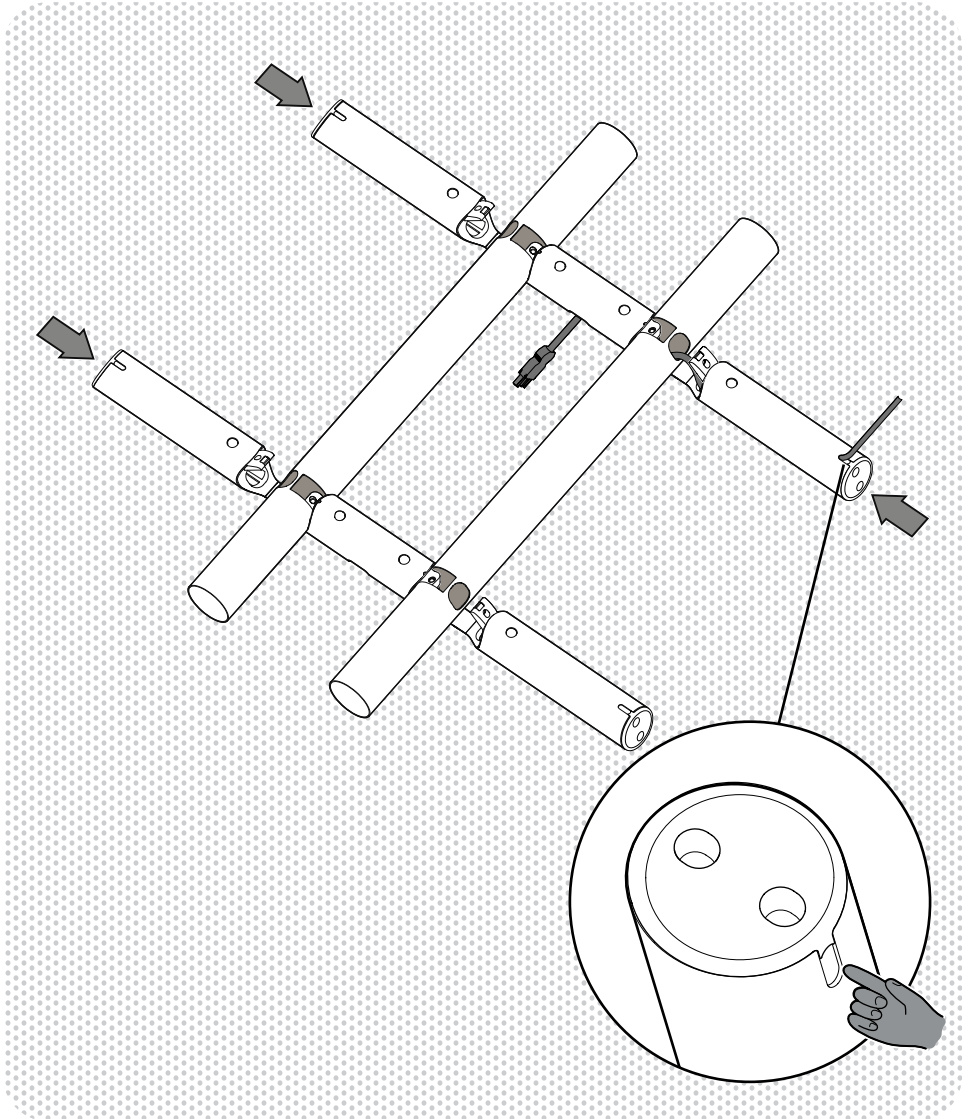


- CABLING 280 / 350 / 420 CM TABLES -

220 CM	280 CM	350 CM	420 CM
--------	--------	--------	--------


6.

Insert the supply cable  into the leg, starting from the end of the leg.
Pull the cable out of the leg and insert it again through the crossbar.
Bring the plug head out of the crossbar through the middle hole.

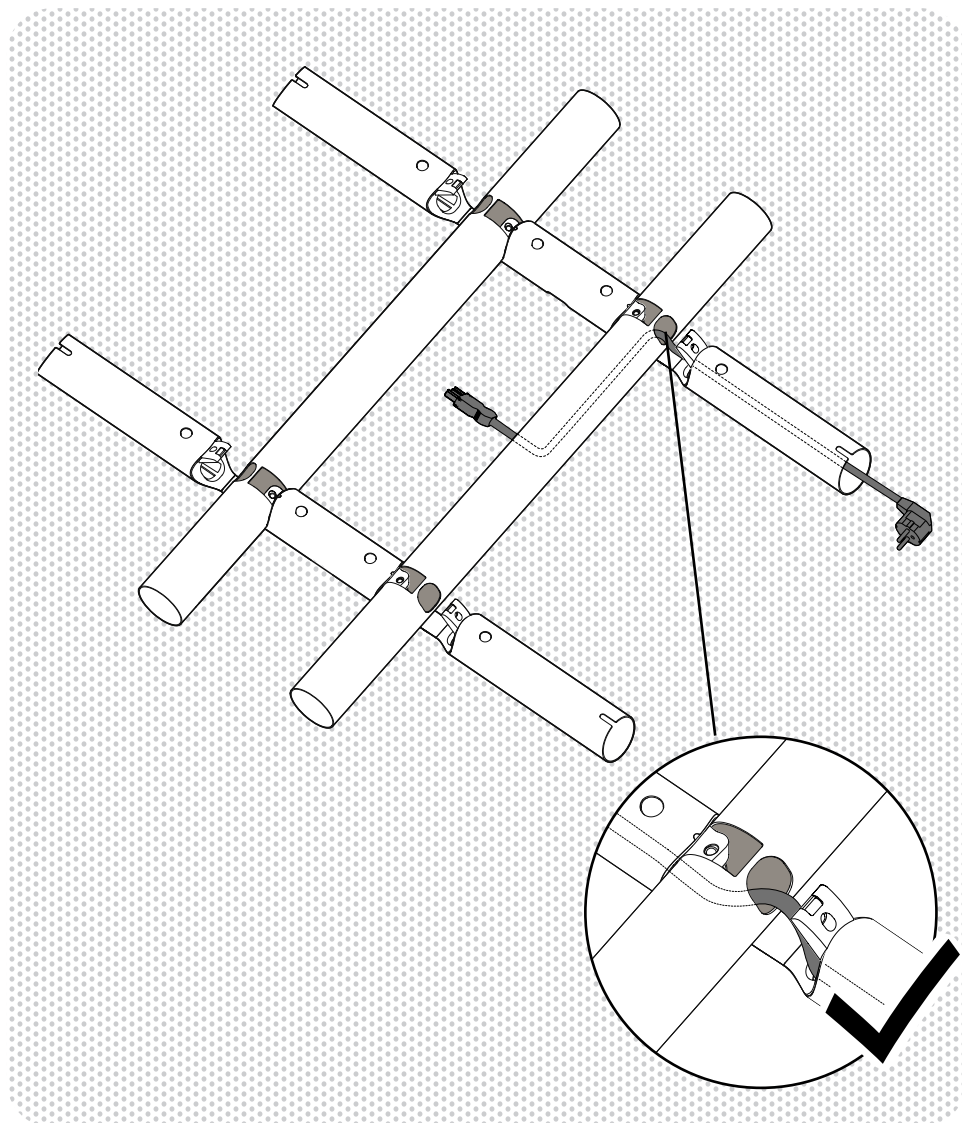


7.

Insert the feet, making sure the supply cable is correctly placed in the cut-out.

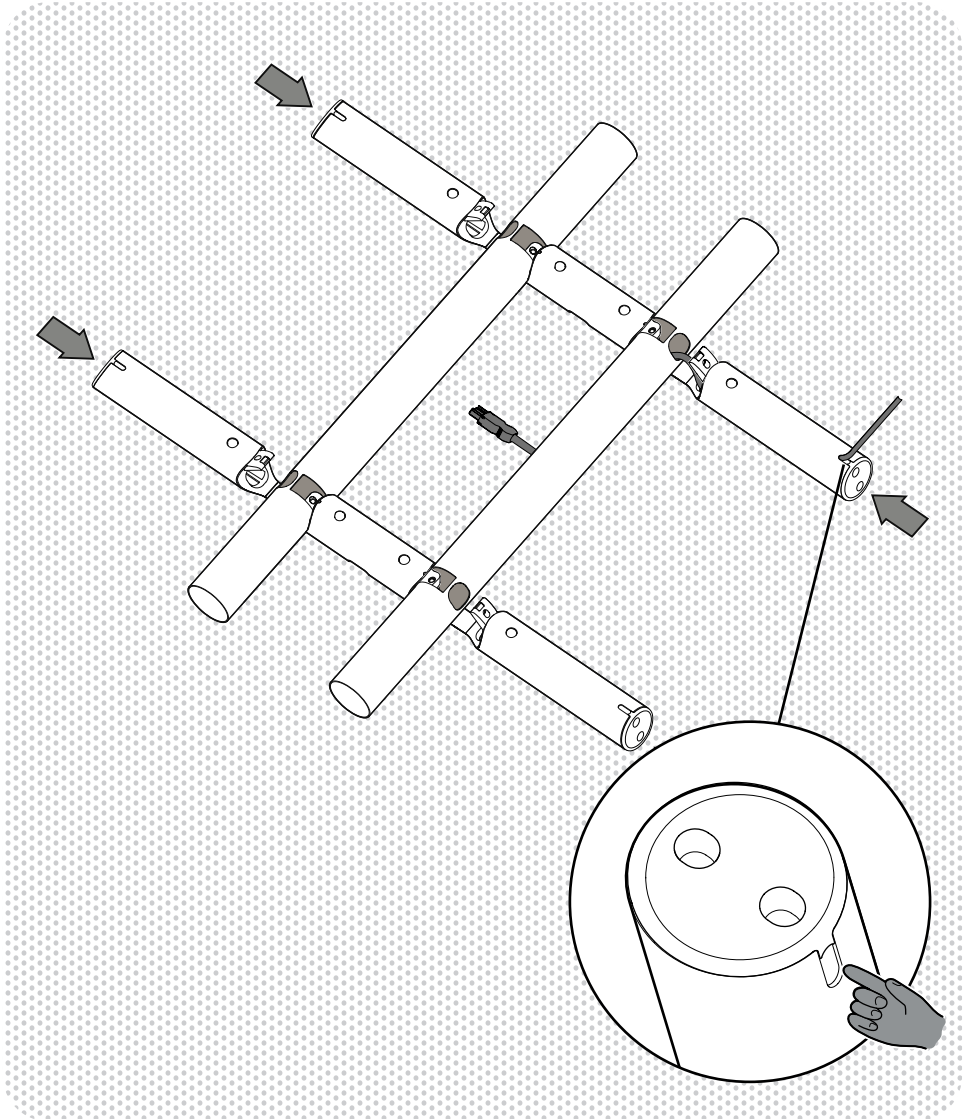


8.

Carefully bend the legs towards the centre.
Push down on the crossbars to keep them in place.

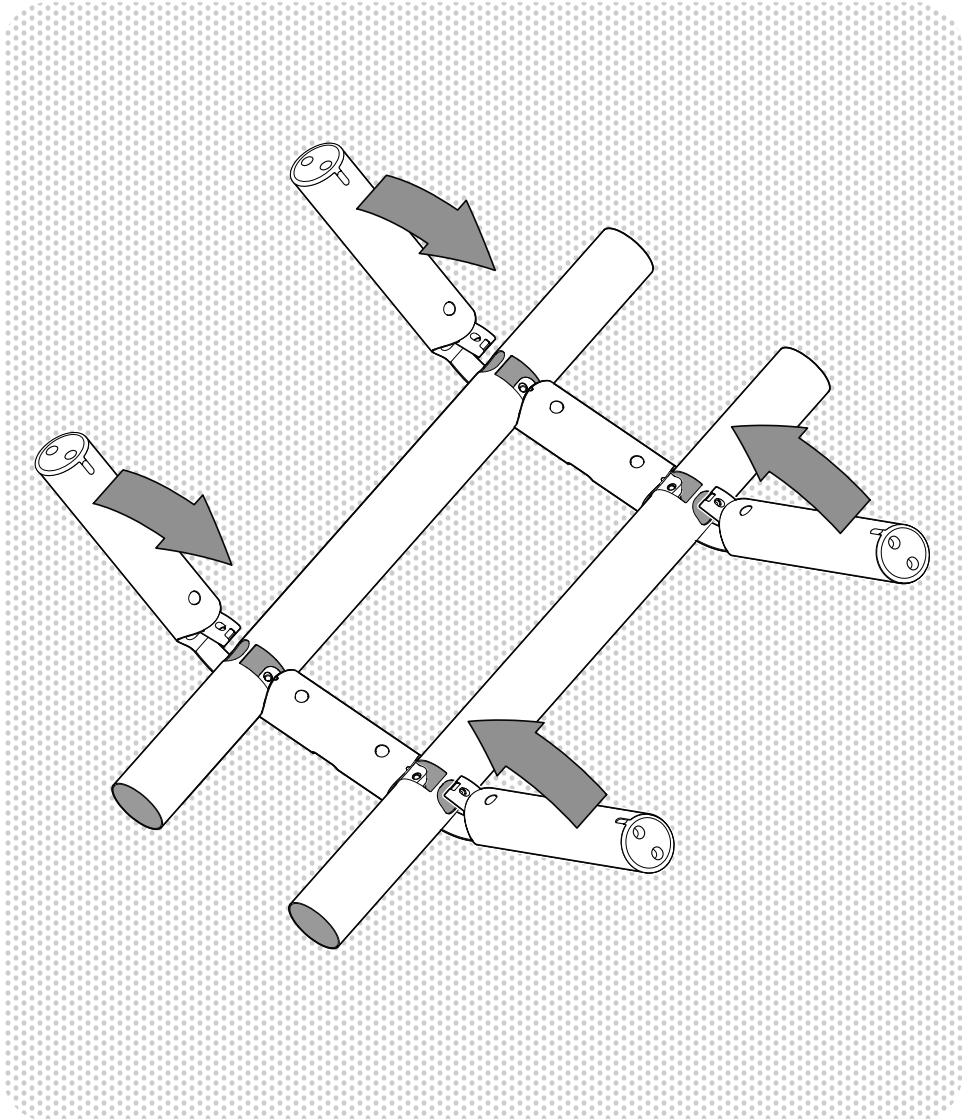


9.

Keep going until you hear a click.
This might require some extra force.

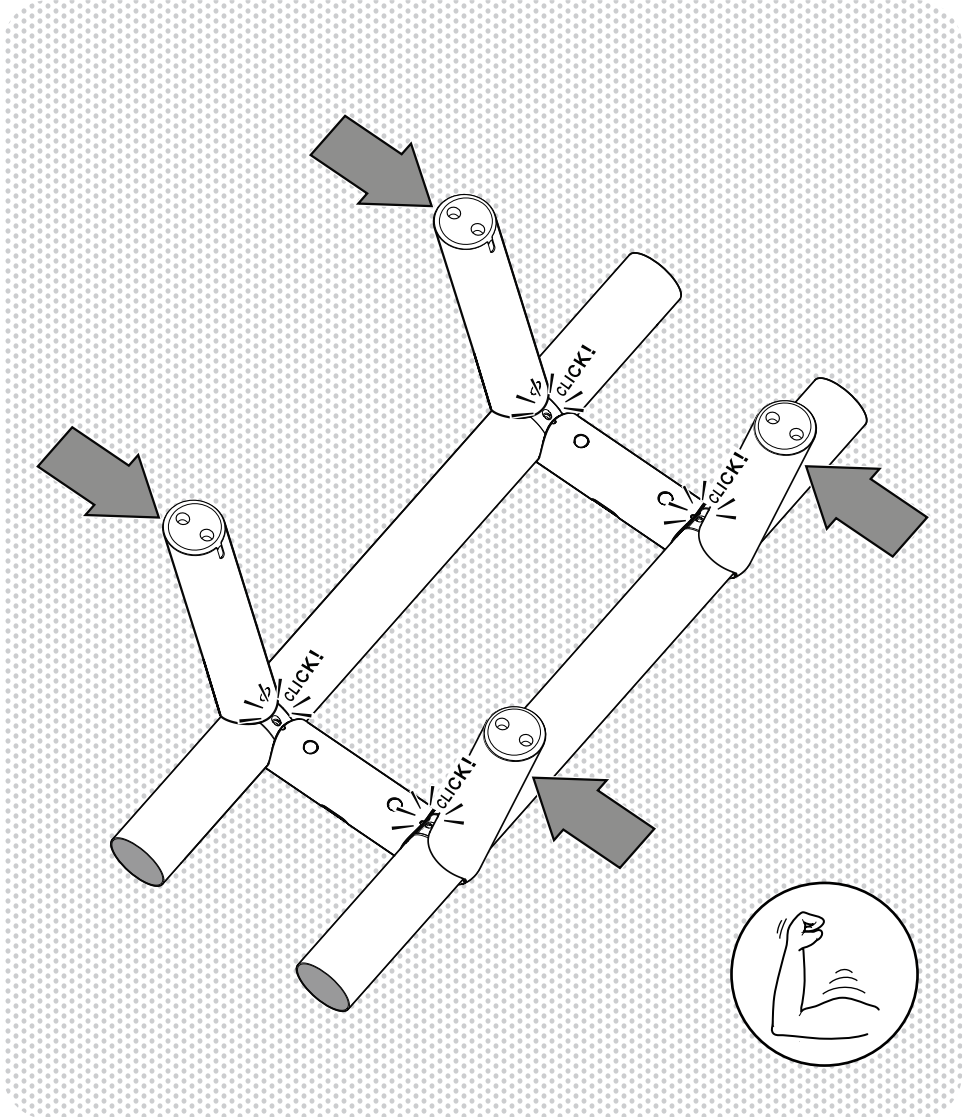


10.

Secure the legs with screws **C** with the washer **L** in between.
Carefully tighten it with the Allen key **D**. Avoid scratching the frame.
Flip the frame.

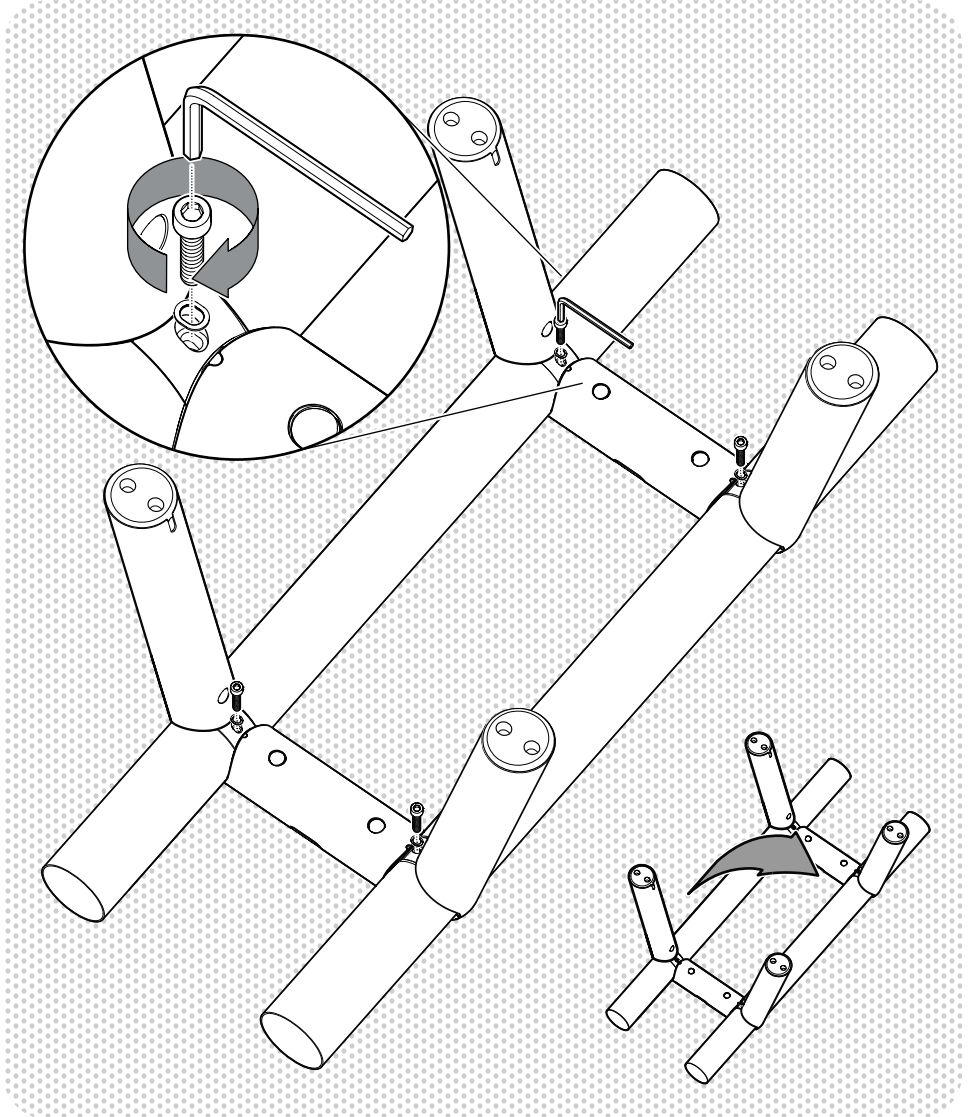


11.

If the floor is uneven, adjust the feet until the table is level.

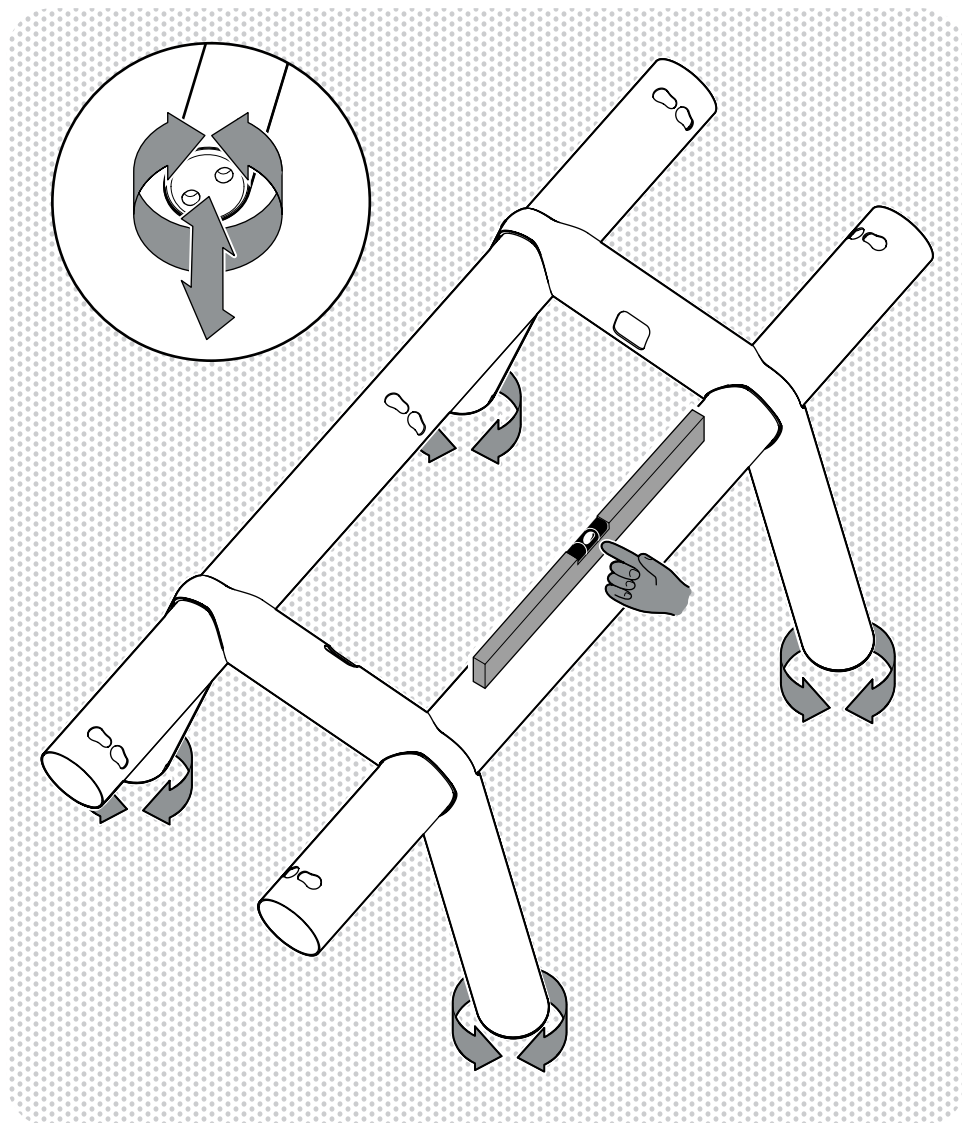


12.

Place the connectors.

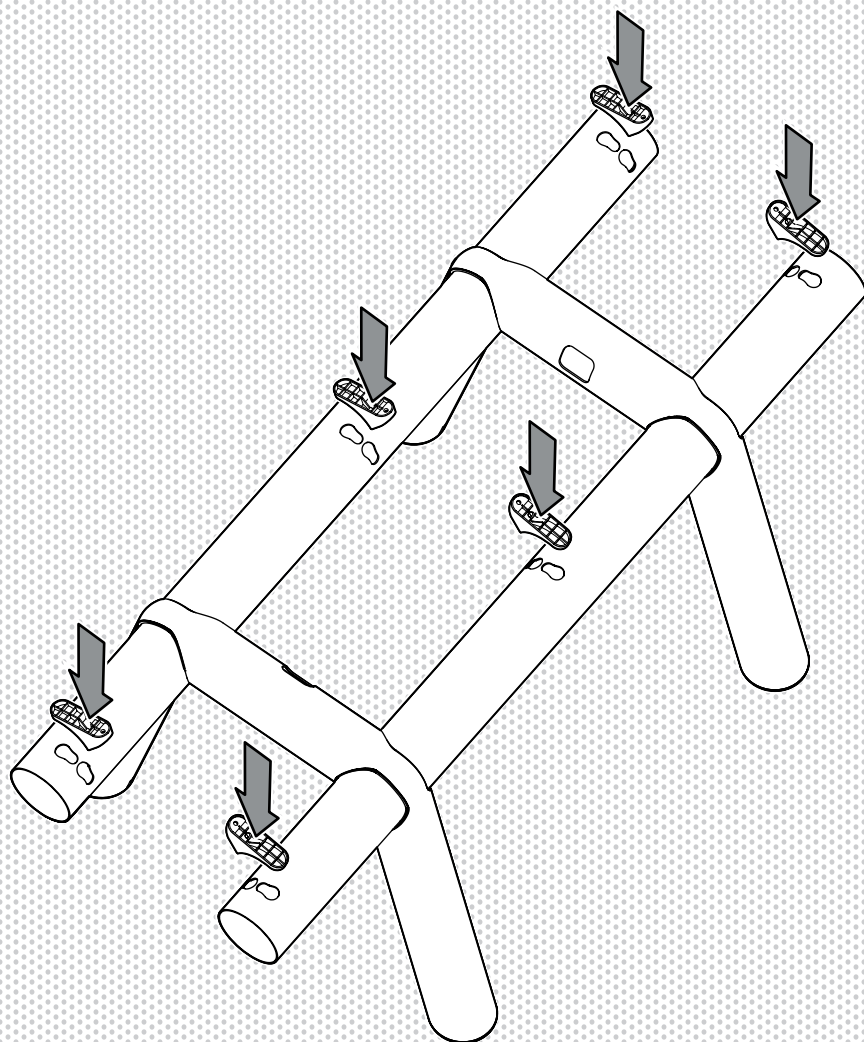


13.

Rotate the connectors towards the centre of the table so that they lock in place.
This might require some extra force.

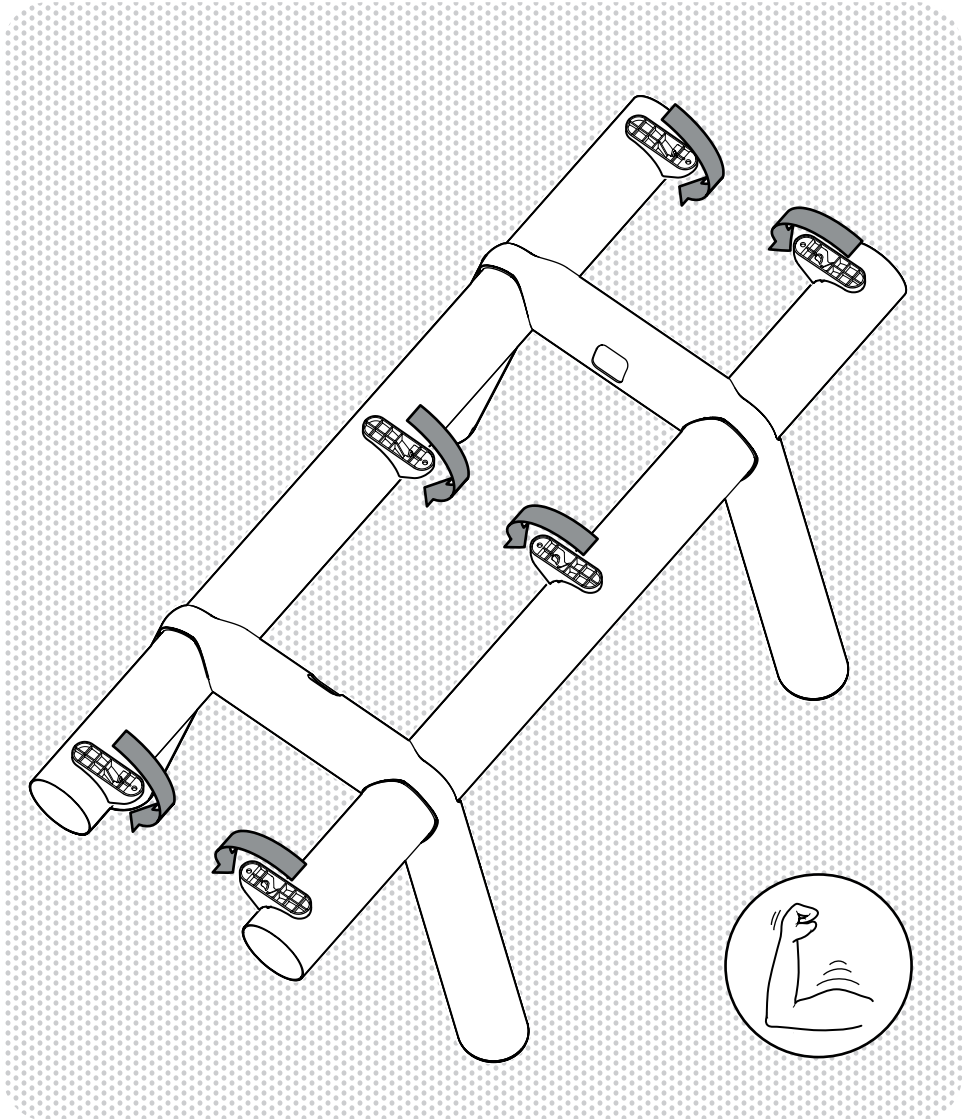


14.

Insert the end caps. Make sure they are aligned with the holes as illustrated.

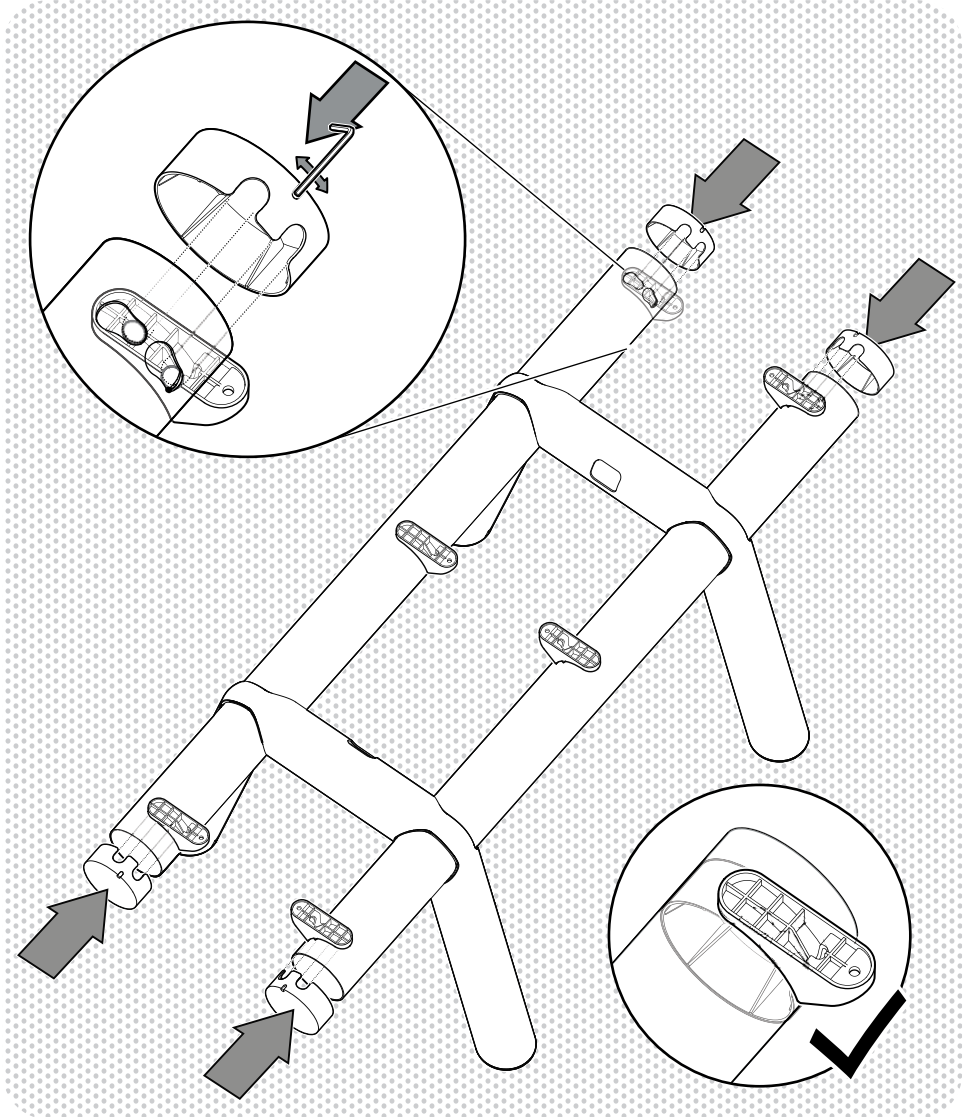


15.

Place the tabletop on top.

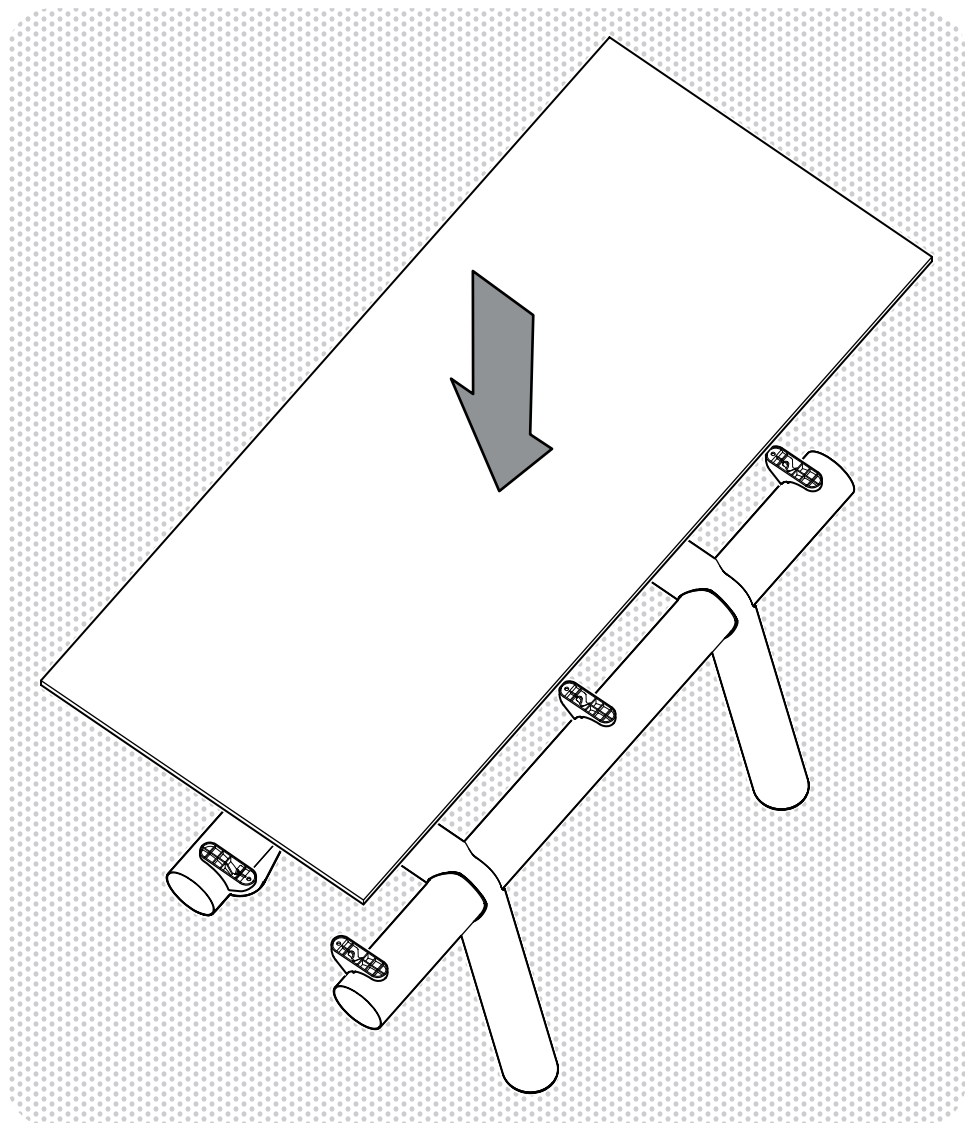


16.

Align the cut-out with the two connectors.

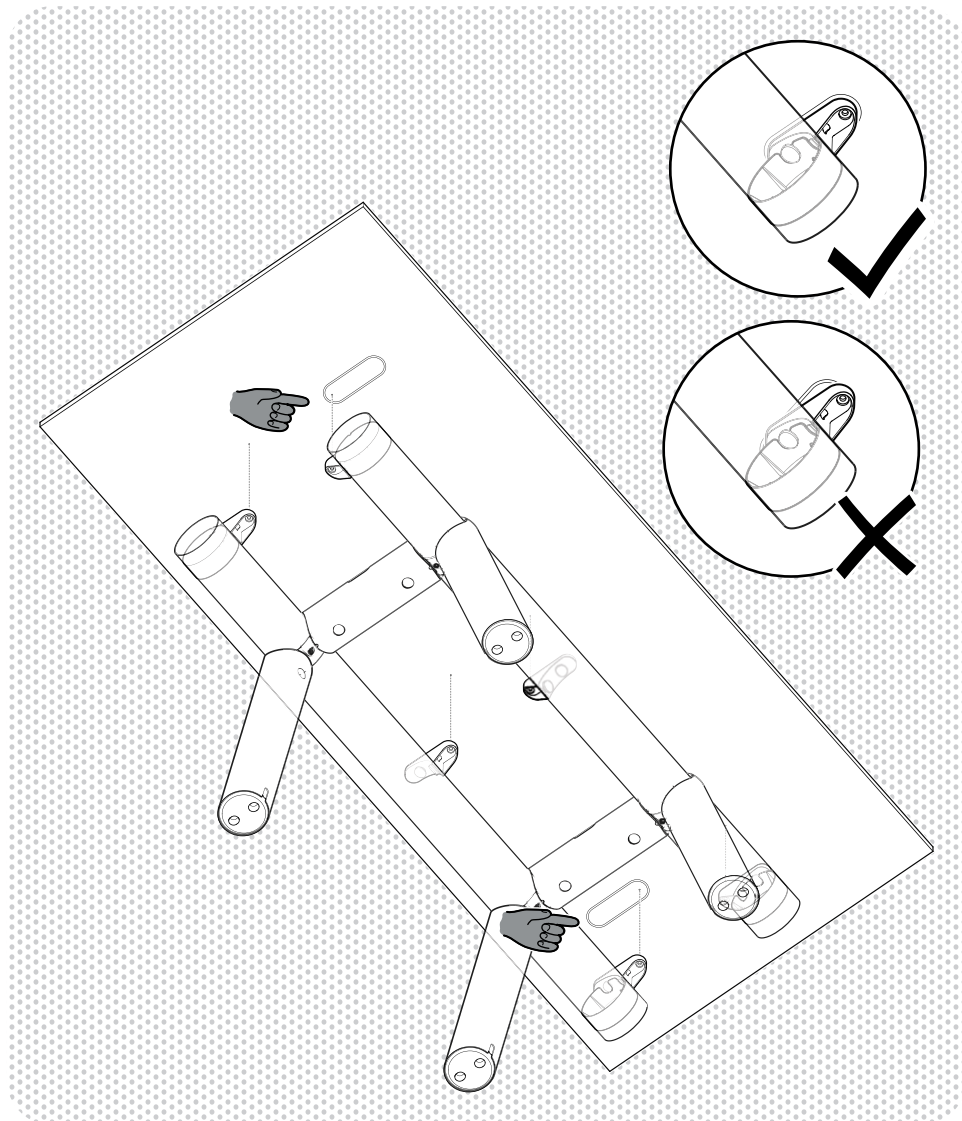

17.


Secure the table top with the screws **H**.
Make sure the screws go into the pre-drilled holes.

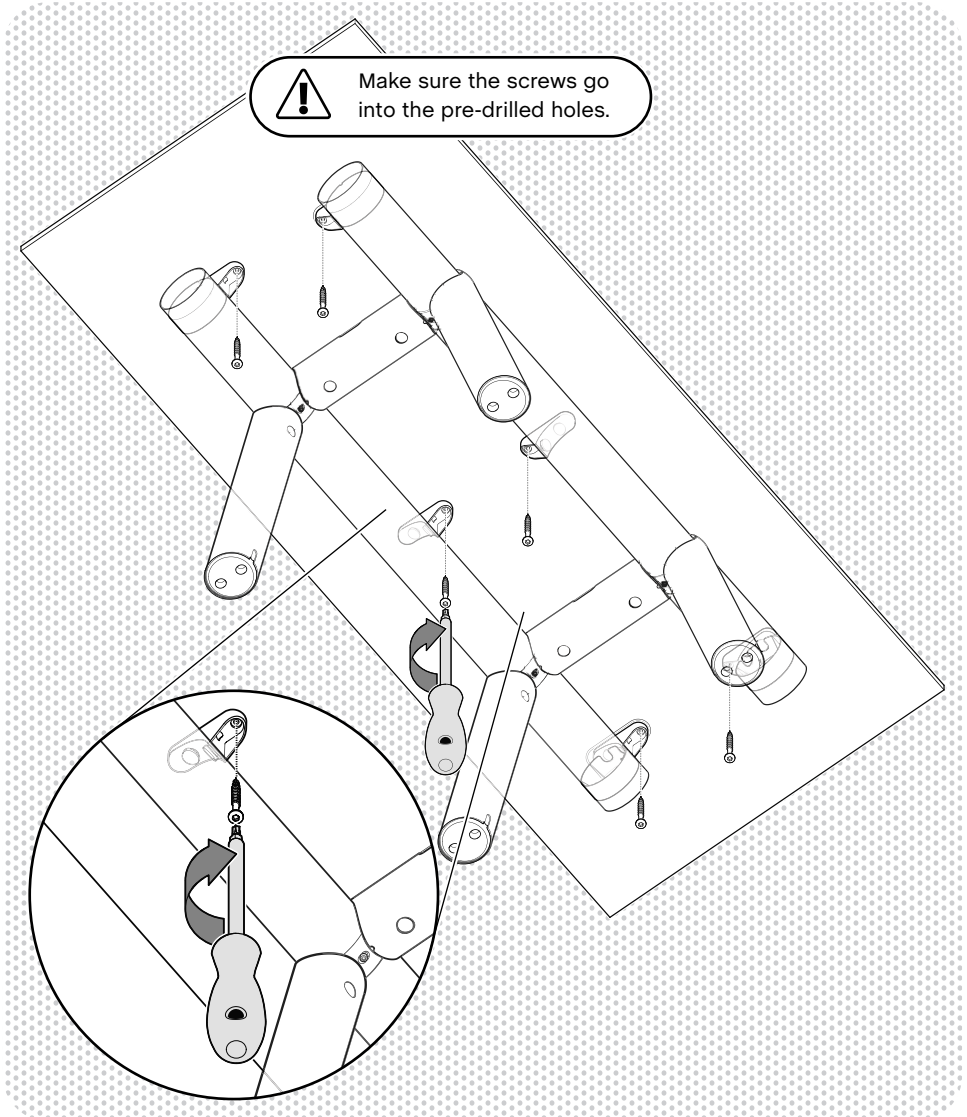

- INSTALLING POWER FRAME -


18.

If you are installing a Coni module, please go to Step 24.

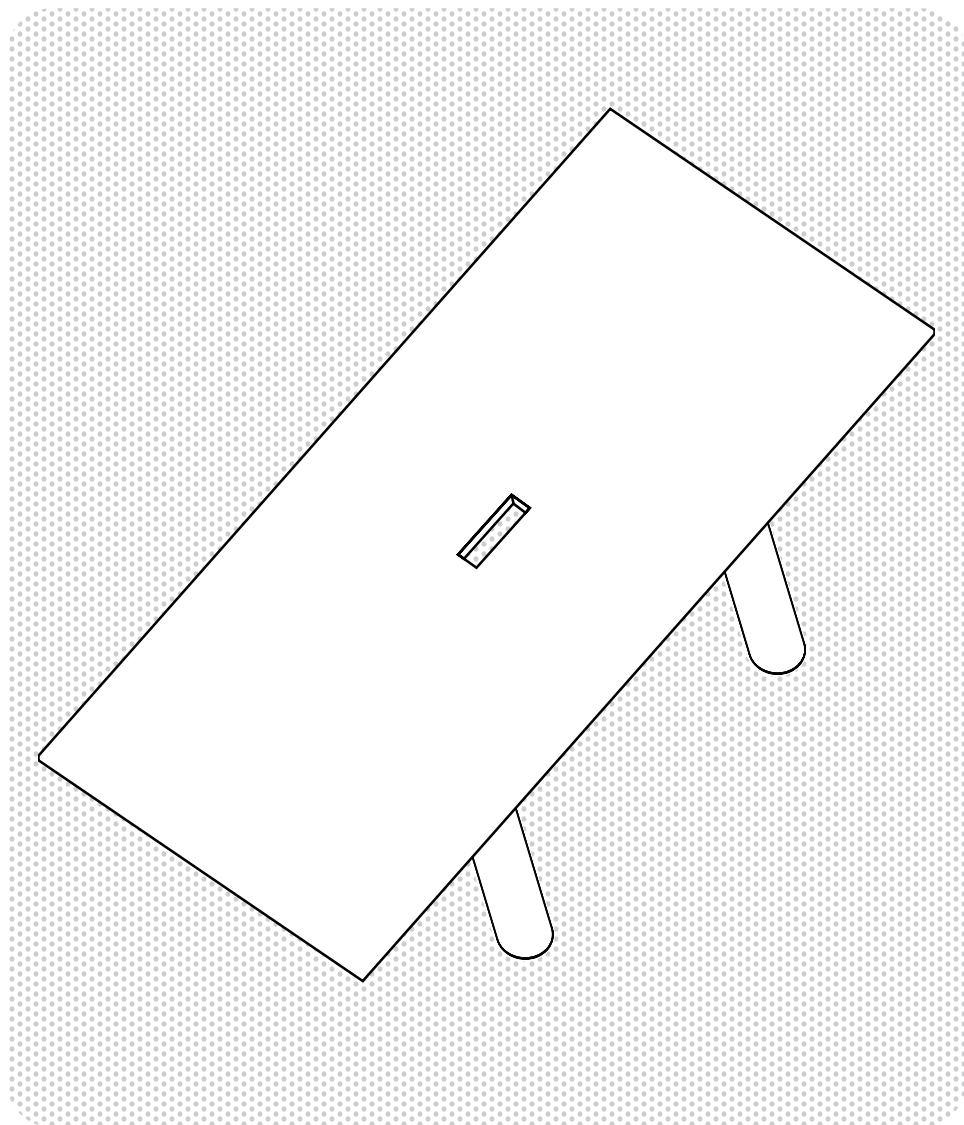


19.

Place the Power Frame module in the cut out in the tabletop.

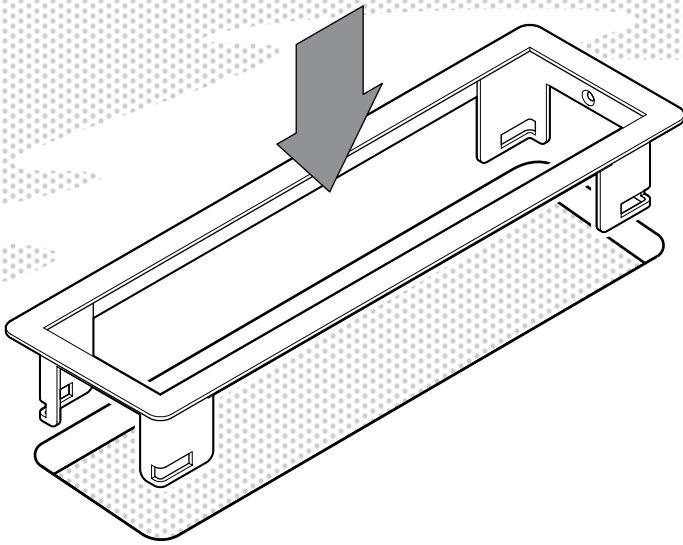


20.

Fasten it with screws.

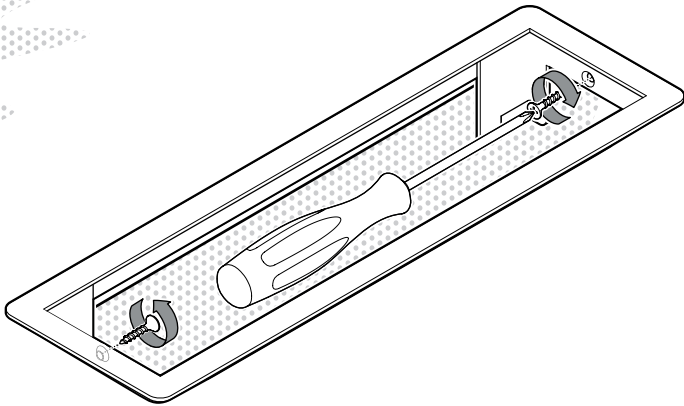


21.

Insert the Power module.

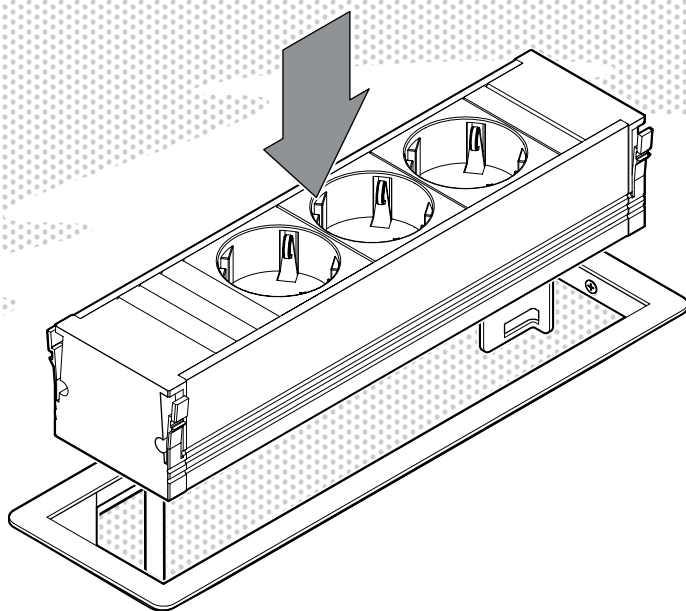


22.


Plug the Power Frame module to the supply cable.

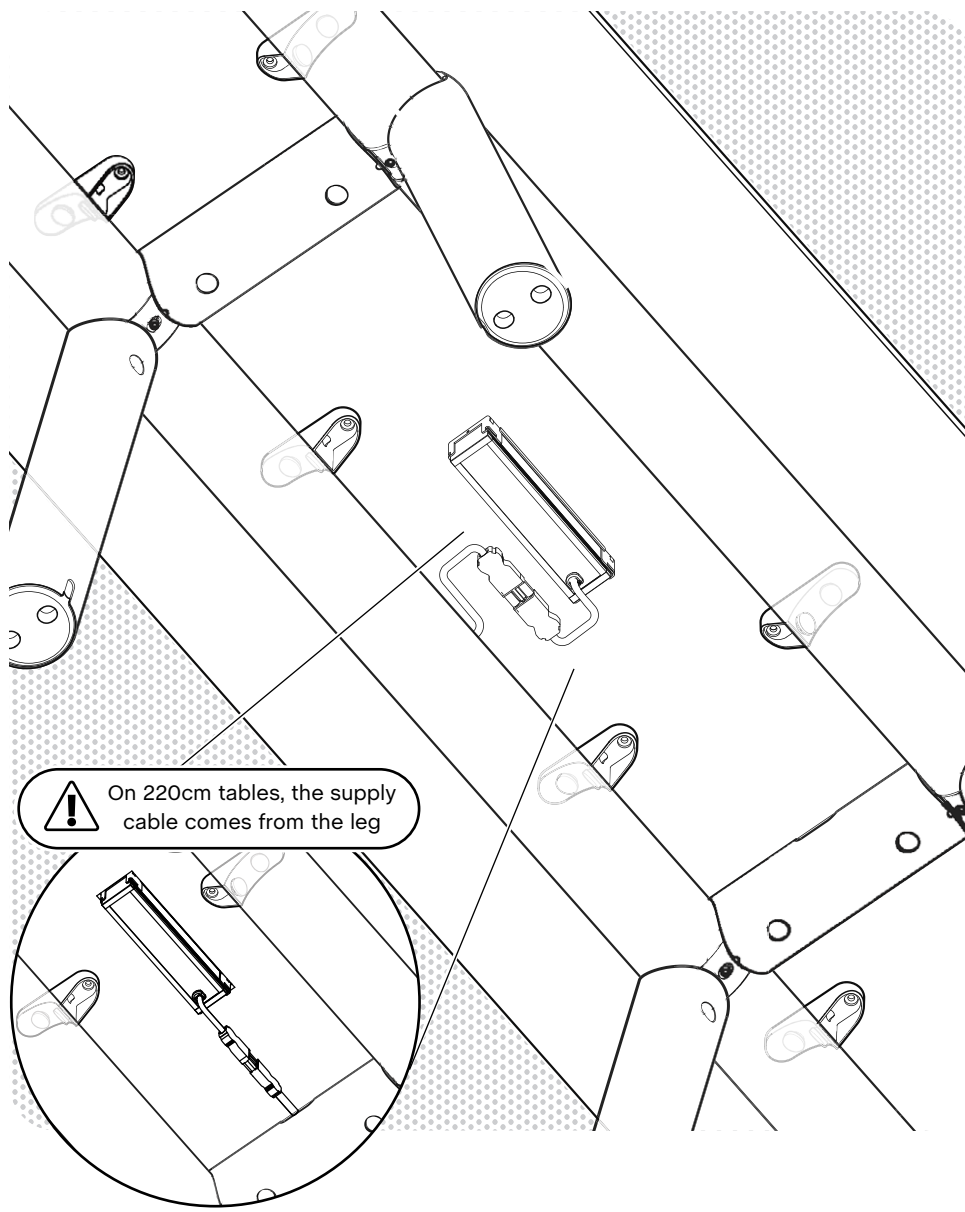

23.


Done!

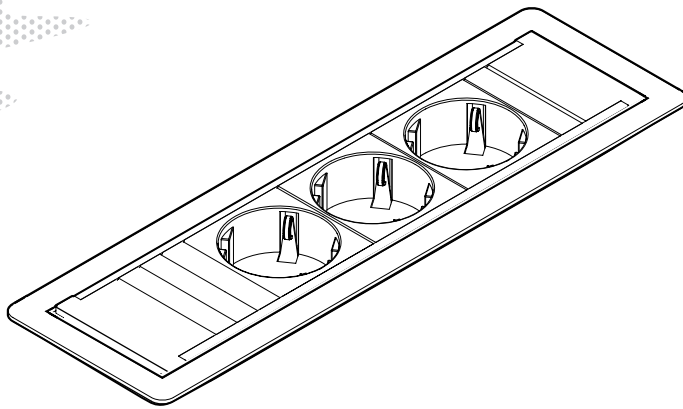

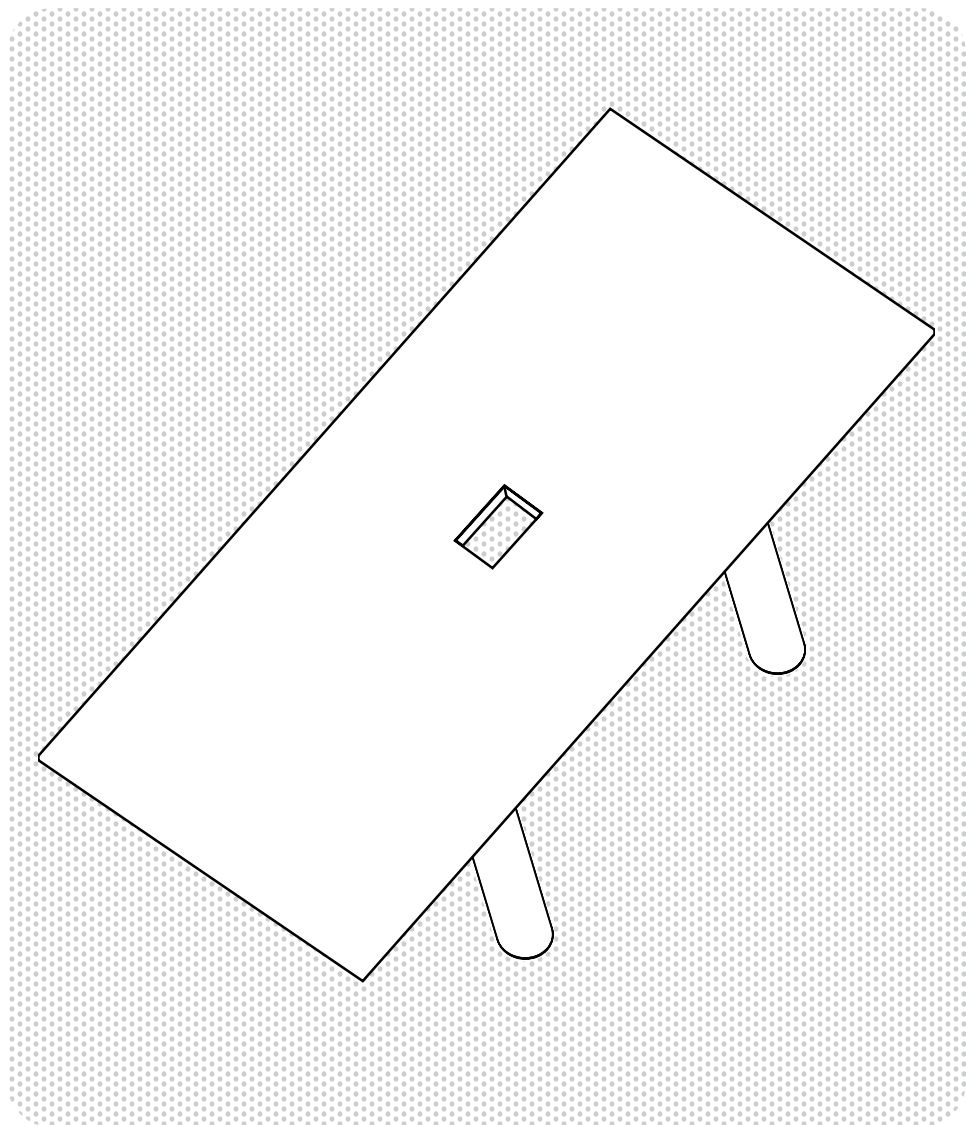


25.

Place the CONI frame in the cut-out in the tabletop.

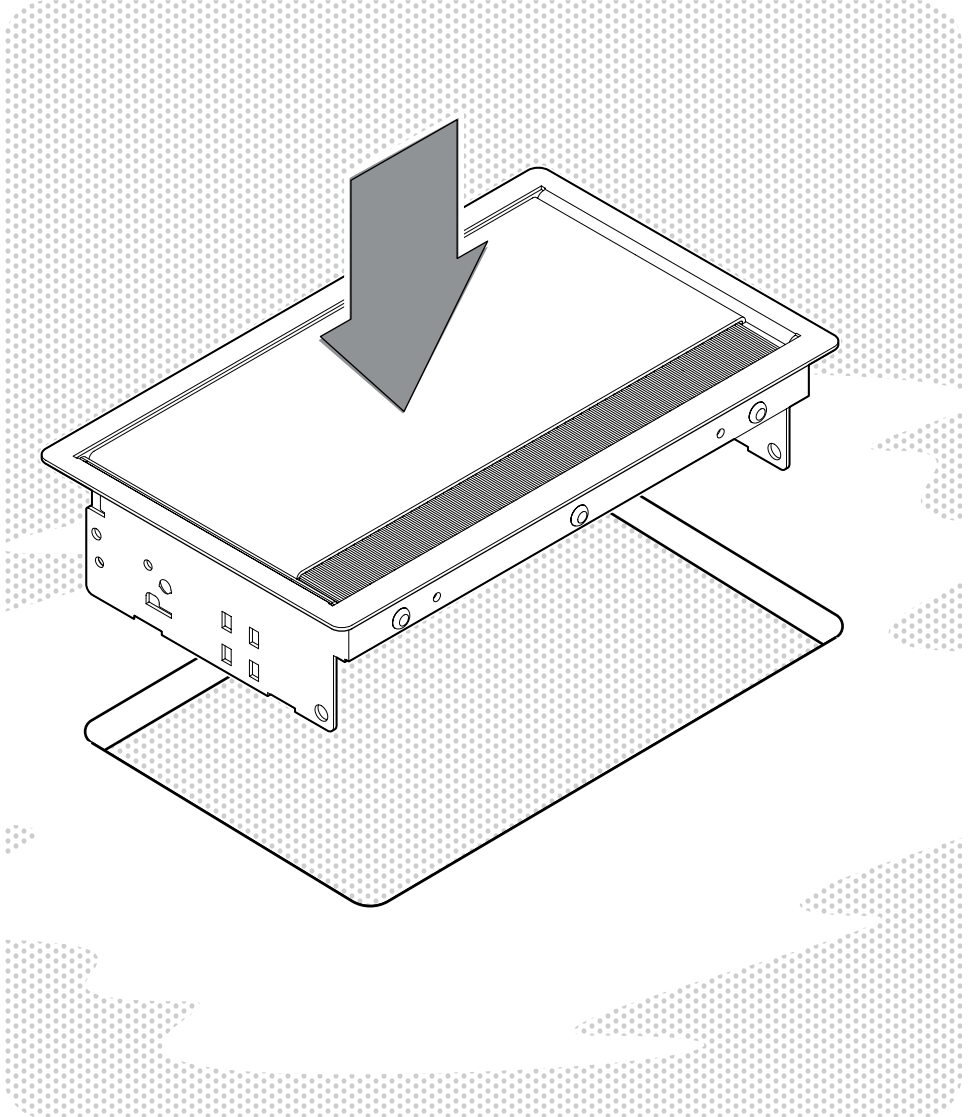


26.

Place the connectors in the holes on the side of the module as illustrated.
Use the lower pair of holes for tabletops 22-35 mm thick.

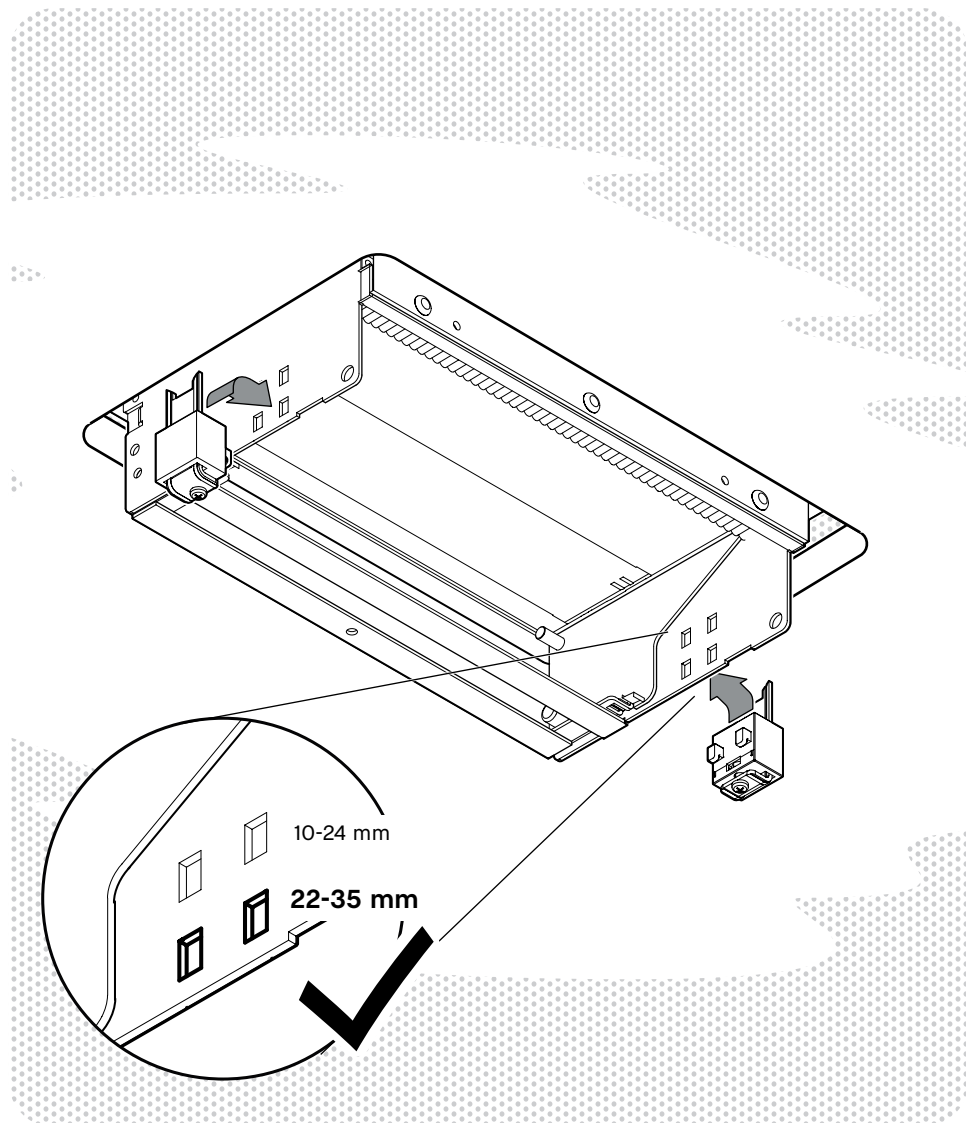


27.

Tighten the screws on the connectors to secure the module.

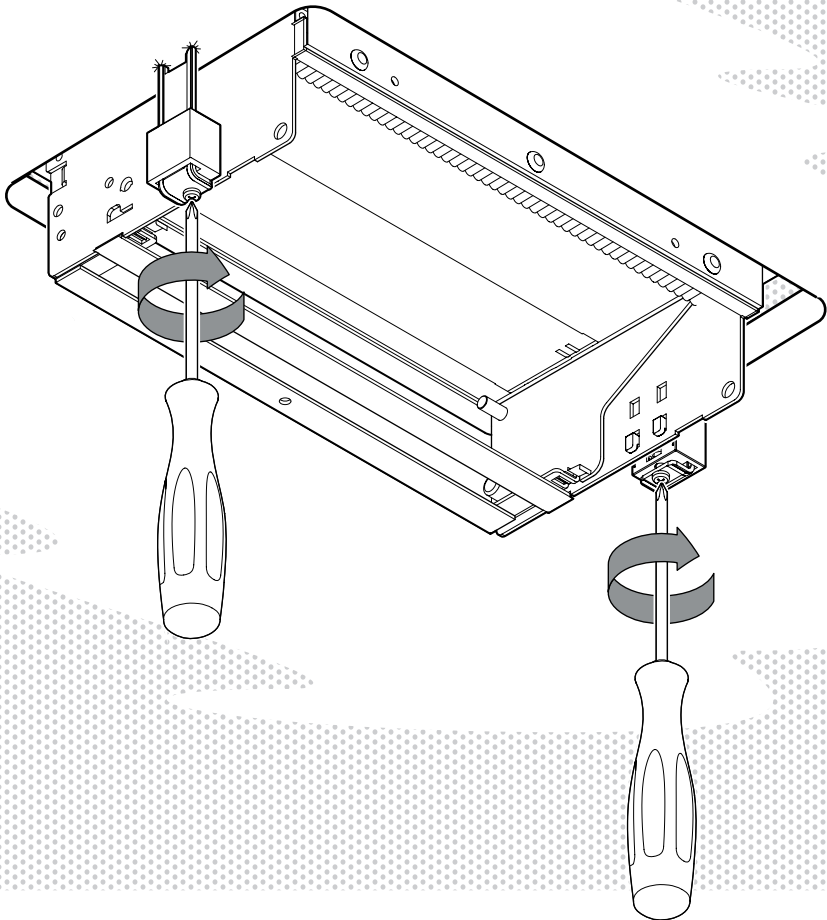


28.

Open the lid and insert the power module.

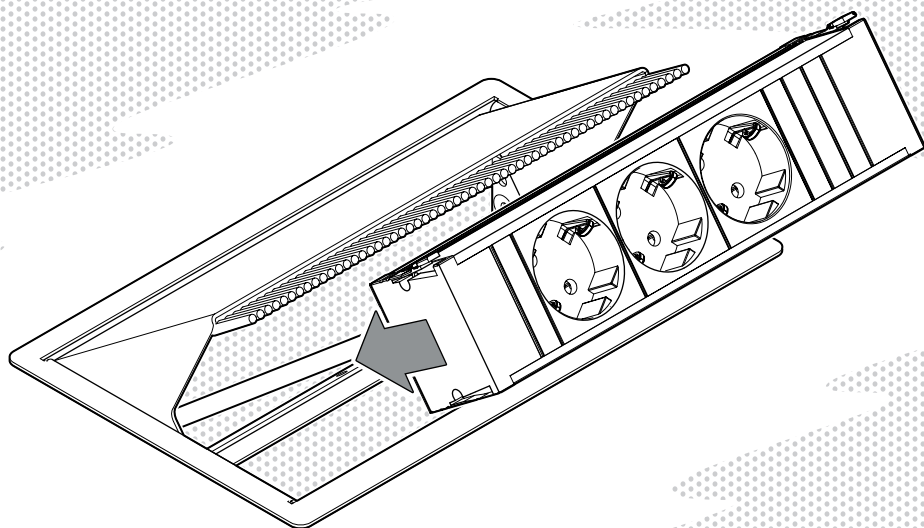


Plug the Coni module to the supply cable.

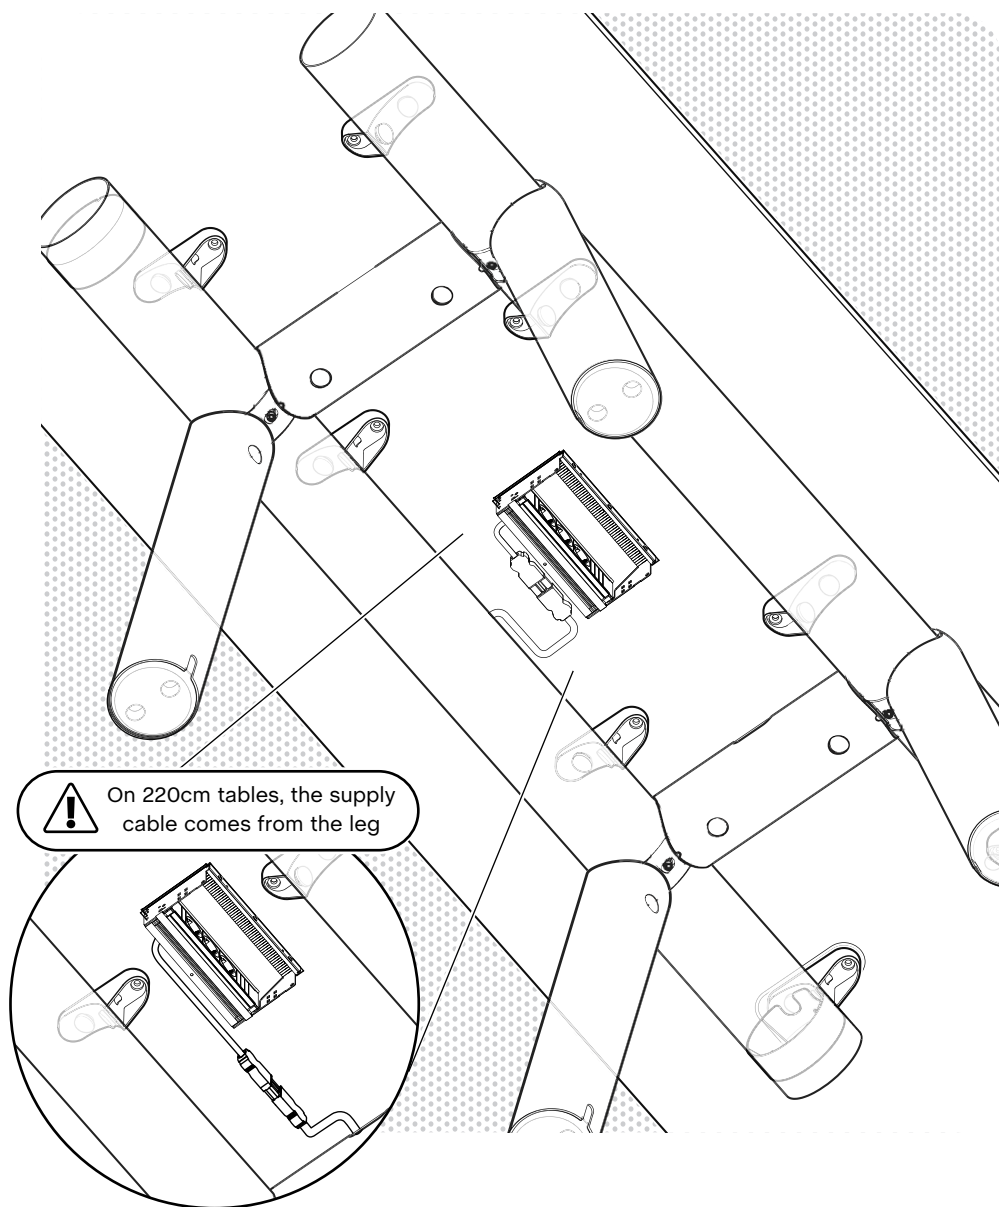

30.

Done!

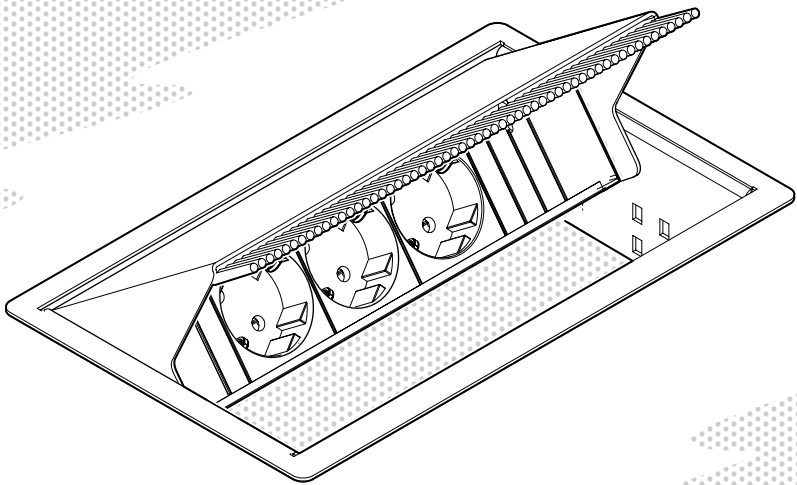

- CARE & MAINTENANCE -

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.



Please find our Care & Maintenance
guide by scanning the QR code



You can find more relevant information on
Boa Table by scanning the QR code

You can also find the same information here
hay.dk/downloads

Havnen 3 8700 Horsens Denmark
+45 3164 6000 / hay@hay.com

ITEM NO. AC295-E439



5 710441 359319

02/04/2024

HAY

